ERSATZTEILLISTE
OKIFAX 5400
FX-175 DVP_Ve(R)

SPARE PART LIST
OKIFAX 5400
FX-175 DVP_Ve(R)

Änderungen vorbehalten
Changes without notice

M-OSD-10074-10

SECTION 1 Cabinet Assy

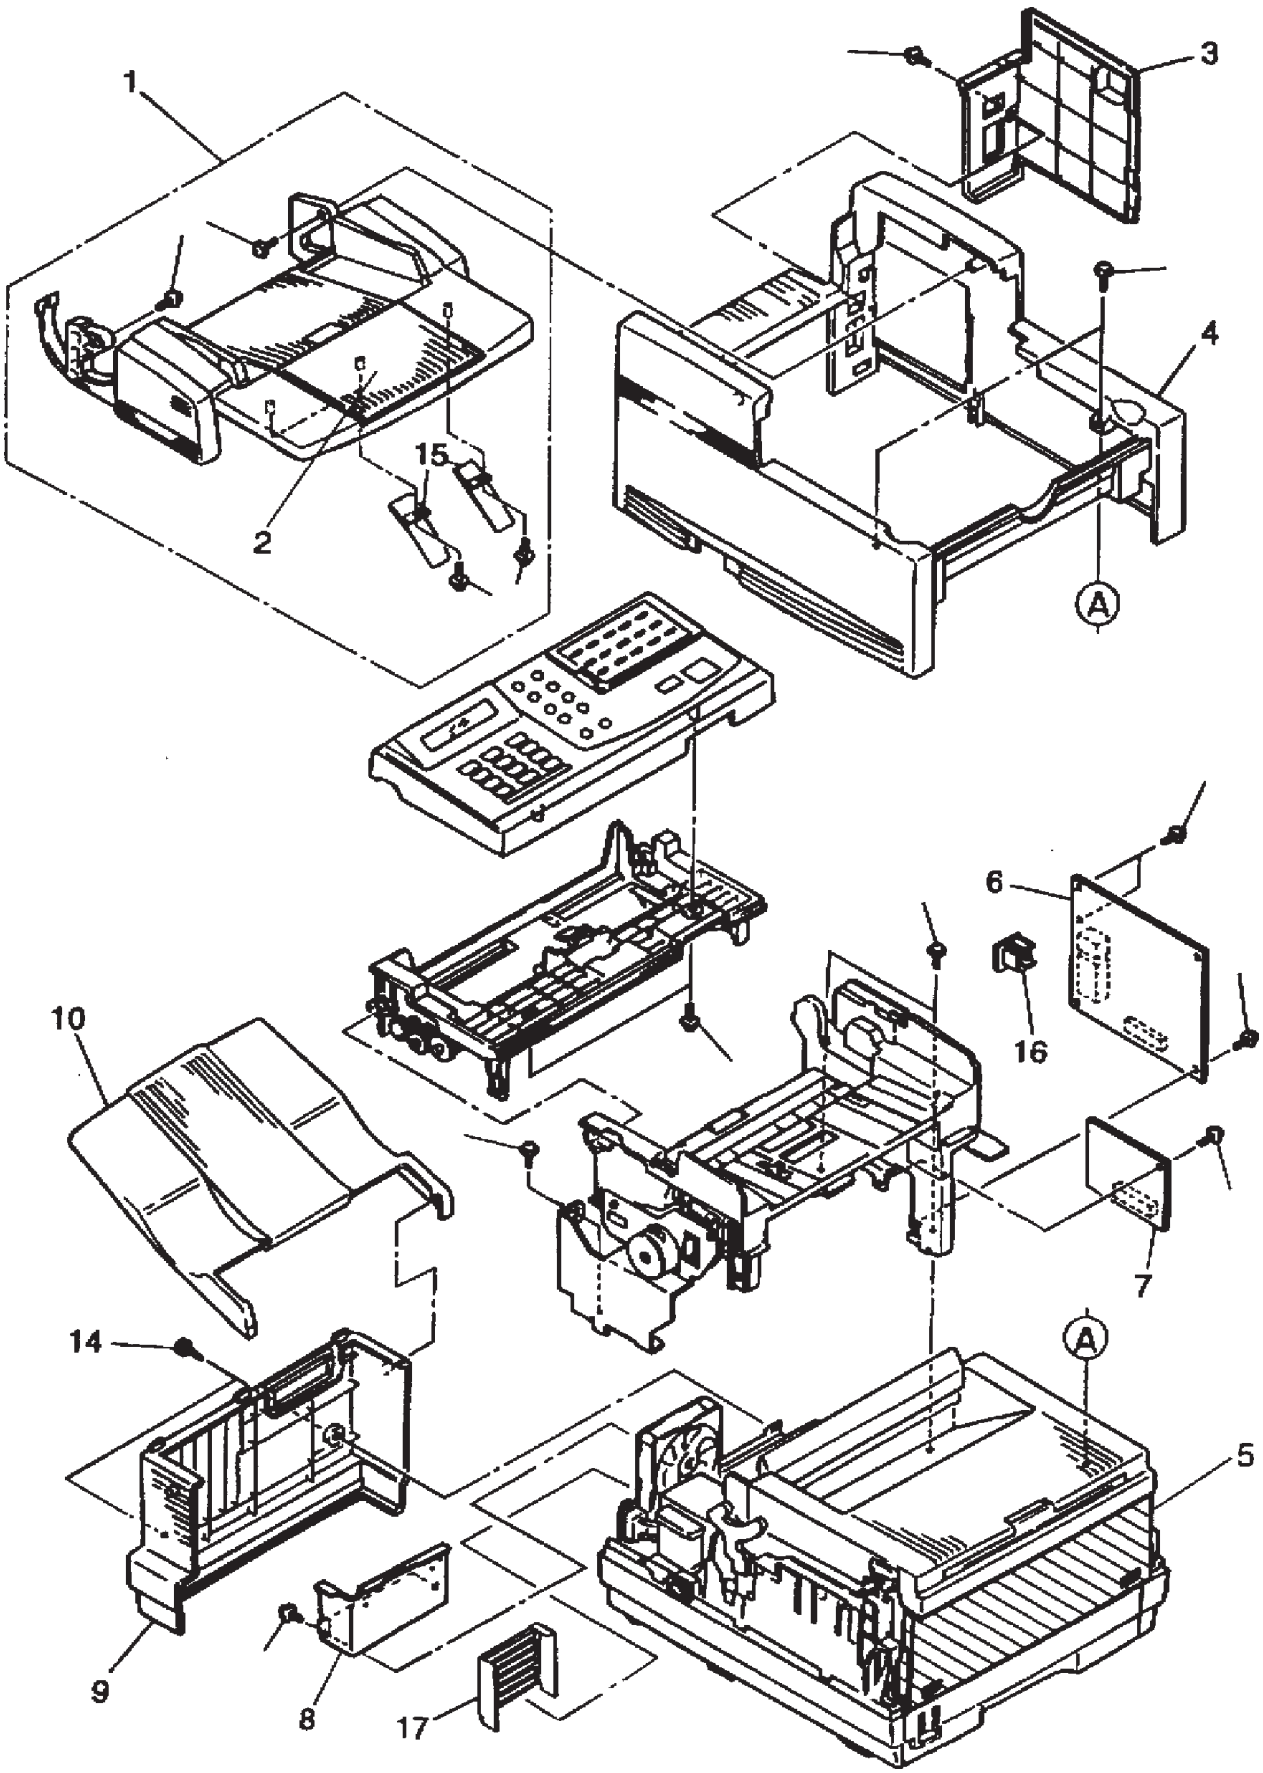

LIST 1 Cabinet Assy

POS	BESCHREIBUNG	ARTIKELNUMMER
1	DOCUMENT HOPPER ASSY	1PA4120-1079G1
2	SUB HOPPER PLATE	2PP4120-1084P1
3	NCU COVER	2PP4120-1091P1
4	MAIN COVER	1PP4120-1089P4
5	MANUAL FEED GUIDE ASSY	2PA4083-6130G1
6	BOARD (FN5), UK, FRA	40044401
	BOARD (DN5), GER	40044101
	BOARD (WN5), SWE	40044301
	BOARD (WN5), NL	40044303
	BOARD (WN5), IT	40044312
	BOARD (WN5), NW	40044313
	BOARD (WN5), DK	40044314
	BOARD (WN5-7), OKI - INT	40044307
7	BOARD S34-2	40274601
8	PARTITION PLATE	3PP4120-1088P1
9	REAR COVER	1PP4120-1090P1
10	STACKER COVER	1PP4120-1093P1
14	KNOB SCREW	4PB4120-1136P1
15	ASSIST GUIDE ASSY	4PP4120-1161G1
16	CONNECTOR PLUG	223A7010P003
17	GUARD PLATE	40275501

SECTION 2 Control Panel Assy

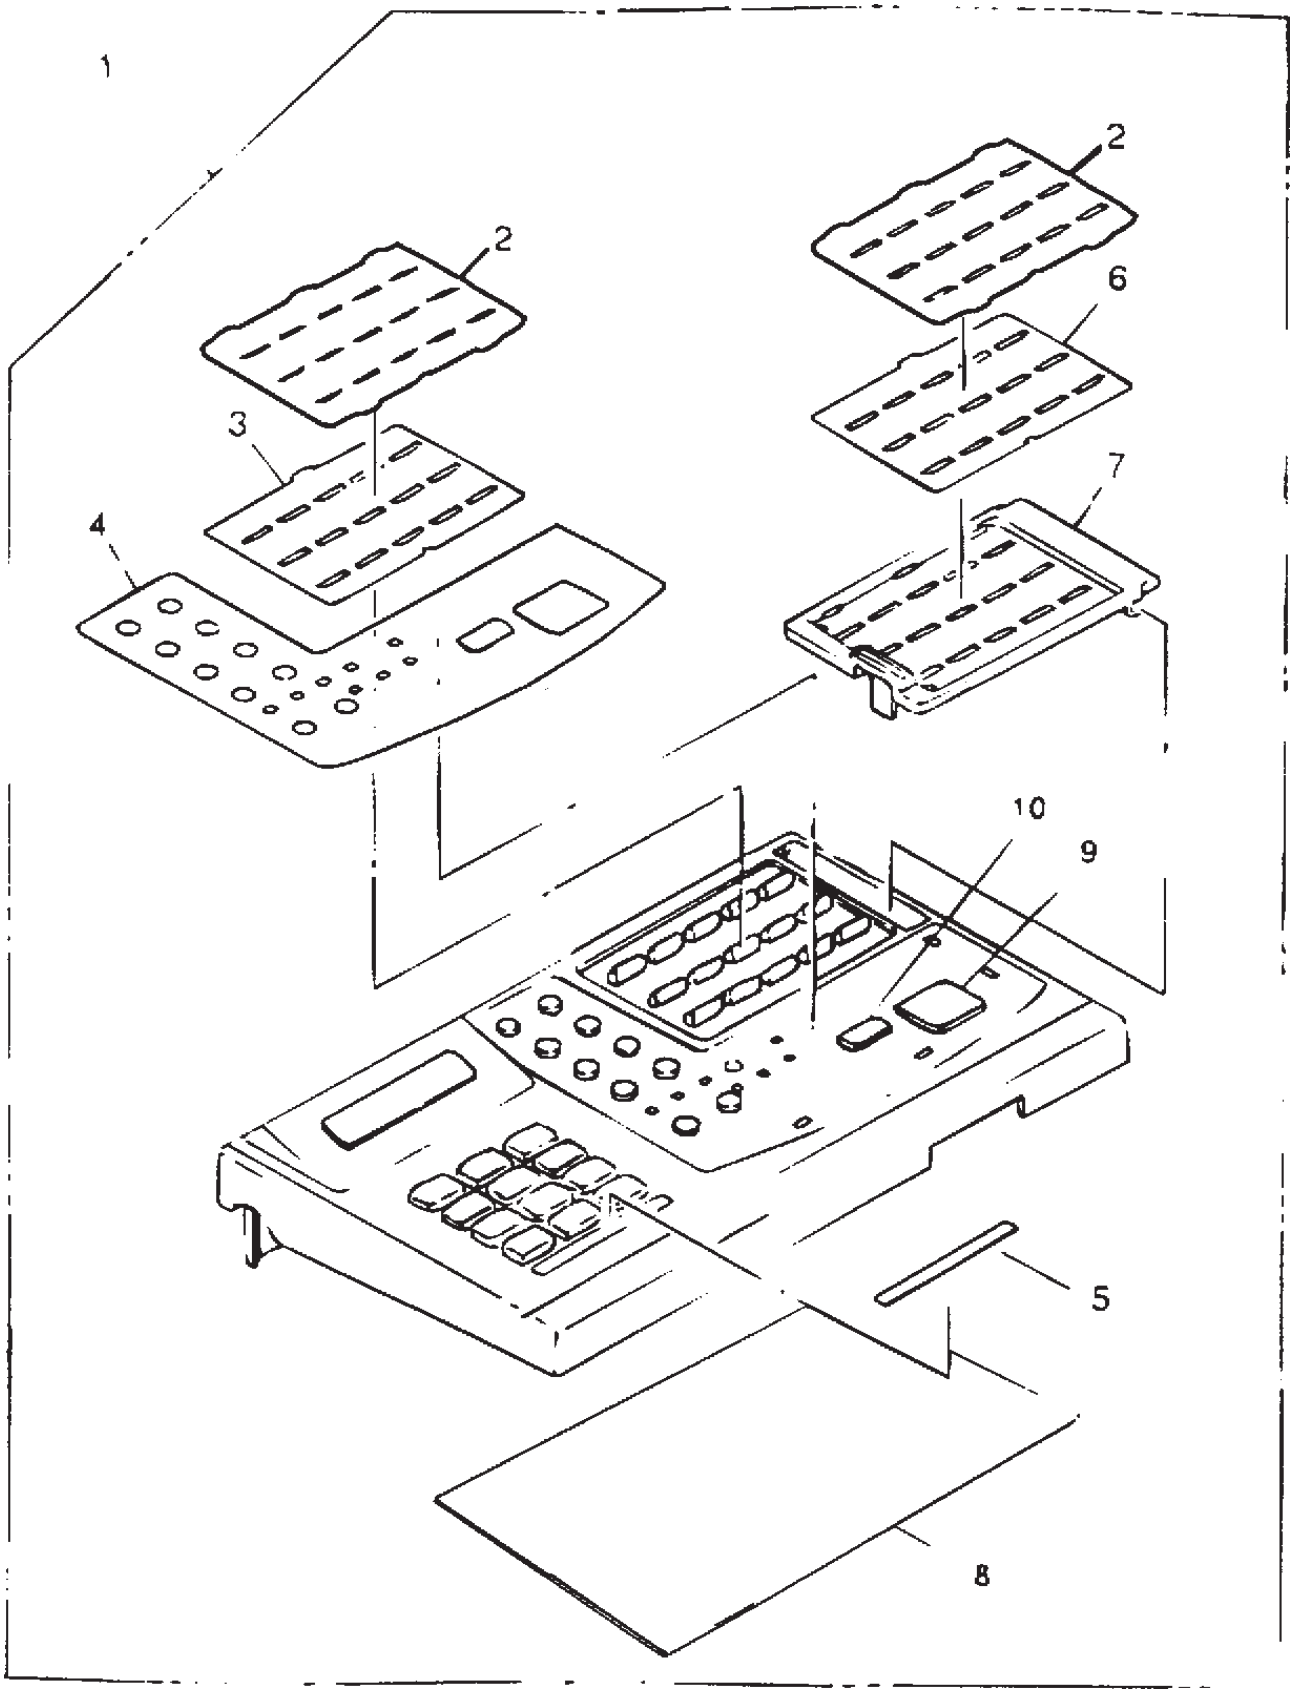

LIST 2 Control Panel Assy

POS	BESCHREIBUNG	ARTIKELNUMMER	REMARKS
1	OP. PANEL ASSY	40079102	**NO SHEETS**
2	ONE TOUCH COVER FILM	4PB4120-1074P1	
3	ONE TOUCH SHEET, GER	4PB4120-1073P102	
	ONE TOUCH SHEET; DK	4PB4120-1073P101	
	ONE TOUCH SHEET; IT	4PB4120-1073P103	
	ONE TOUCH SHEET; FR	4PB4120-1073P104	
	ONE TOUCH SHEET; NW	4PB4120-1073P106	
	ONE TOUCH SHEET; SW	4PB4120-1073P108	
	ONE TOUCH SHEET; NL	4PB4120-1073P109	
	ONE TOUCH SHEET; SP	4PB4120-1073P131	
4	FUNCTION SHEET; GER	00101208	
	FUNCTION SHEET; ENG	00101210	
	FUNCTION SHEET; IT	00101201	
	FUNCTION SHEET; NW	00101202	
	FUNCTION SHEET; DK	00101203	
	FUNCTION SHEET; SW	00101204	
	FUNCTION SHEET; NL	00101205	
	FUNCTION SHEET; SP	00101206	
	FUNCTION SHEET; FR	00101209	
5	TEN KEY LABEL, GER	4PB4014-4776P221	
	TEN KEY LABEL; INT	4PB4014-4776P211	
6	ONE TOUCH SHEET; GER	40047003	
	ONE TOUCH SHEET; IT	40047004	
	ONE TOUCH SHEET; NW	40047005	
	ONE TOUCH SHEET; DK	40047006	
	ONE TOUCH SHEET; SW	40047007	
	ONE TOUCH SHEET; NL	40047008	
	ONE TOUCH SHEET; FR	40047002	
	ONE TOUCH SHEET; UK	40047001	
7	ONE TOUCH COVER	1PP4120-1072P1	
8	BOARD 05W	40086801	
9	BUTTON START	40075001	
10	BUTTON STOP	40075101	

SECTION 3 Printer Assy

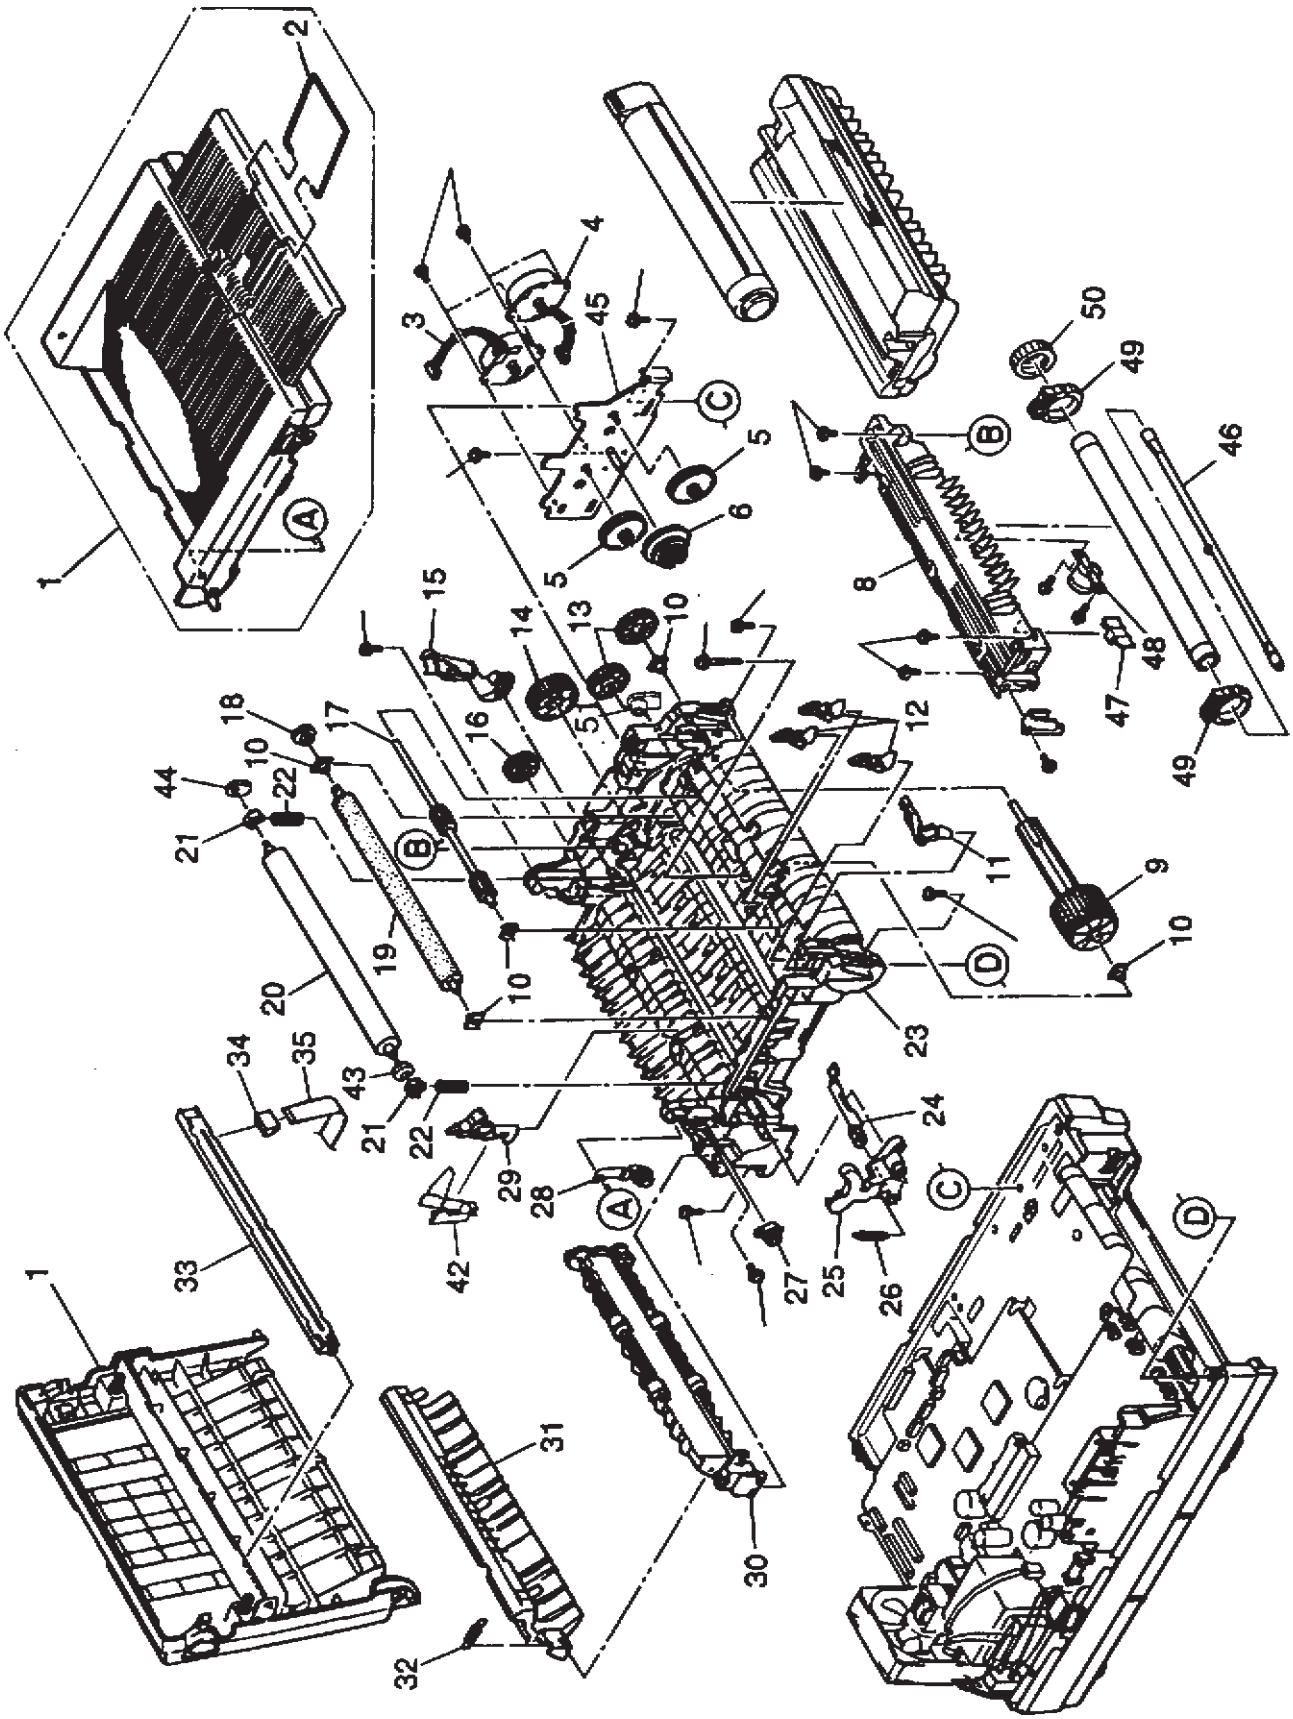

LIST 3 Printer Assy

POS	BESCHREIBUNG	ARTIKELNUMMER
1	STACKER COVER ASSY	2PA4120-1214G1
2	GUIDE WIRE	4PB3517-1567P1
3	PULSE MOTOR (MAIN)	4YB4120-1117P1
4	PULSE MOTOR (RESIST)	4YB4120-1118P1
5	IDLE GEAR A	4PP4083-2593P1
6	REDUCTION GEAR	3PP4083-6076P1
8	FUSING UNIT	2YX4120-1128G2
9	HOPPING ROLLER ASSY	3PA4122-1295G1
10	BEARING A	4PP4083-6022P2
11	TONER SENSOR ASSY	4PP4083-6086G1
12	SENSOR PLATE (INLET)	4PP4083-6083P1
13	ONE-WAY CLUTCH GEAR	4PB4083-6024P1
14	IDLE GEAR B	4PP4083-6080P1
15	RESET LEVER (R)	3PP4083-6054P1
16	IDLE GEAR C	4PP4083-6081P1
17	RESIST ROLLER	3PB4083-6030P1
18	TR GEAR	4PP4083-6042P1
19	TRANSFER ROLLER	3YB4083-7640P1
20	BACK UP ROLLER	3PB4083-6064P2
21	BUSH A	4PP4083-6052P1
22	BIAS SPRING A	4PP4083-6065P1
23	LOWER BASE SUB ASSY	1PP4083-6035G1
24	SWITCH ARM LEVER	3PP4083-6058P1
25	RESET LEVER (L)	3PP4083-6053P1
26	RESET SPRING	4PP4083-6057P1
27	DUMPER FRAME	4PB4083-6197P1
28	DUMPER ARM ASSY	4PP4083-6191G1
29	EJECT SENSOR LEVER ASSY	4PA4083-6025G1
30	EJECT ROLLER ASSY	2PA4120-1129G1
31	RELEASE GUIDE ASSY	2PA4120-1085G1
32	RELEASE SPRING	4PP4120-1087P1
33	LED HEAD UNIT	4YA4116-1228G1
34	PC CONNECTOR	224A1286P0140
35	LEAD CABLE ASSY	4YX4120-1124G1
42	SENSOR WIRE ASSY	40778901
43	WASHER B	4PP4120-1209P1
44	WASHER C	4PP4120-1210P1
45	MOTOR PLATE ASSY	3PP4083-6071G1
46	HALOGEN LAMP, 230V	3PB4120-1105P2
47	HEAT	4PB4083-6106P1
48	THERMOSTAT A	4PB4083-6293P1
49	BEARING B	4PB4083-6128P1
50	GEAR A	4PP4083-6113P1
51	BEARING R	4PP4083-6031P1

SECTION 4 Base Assy

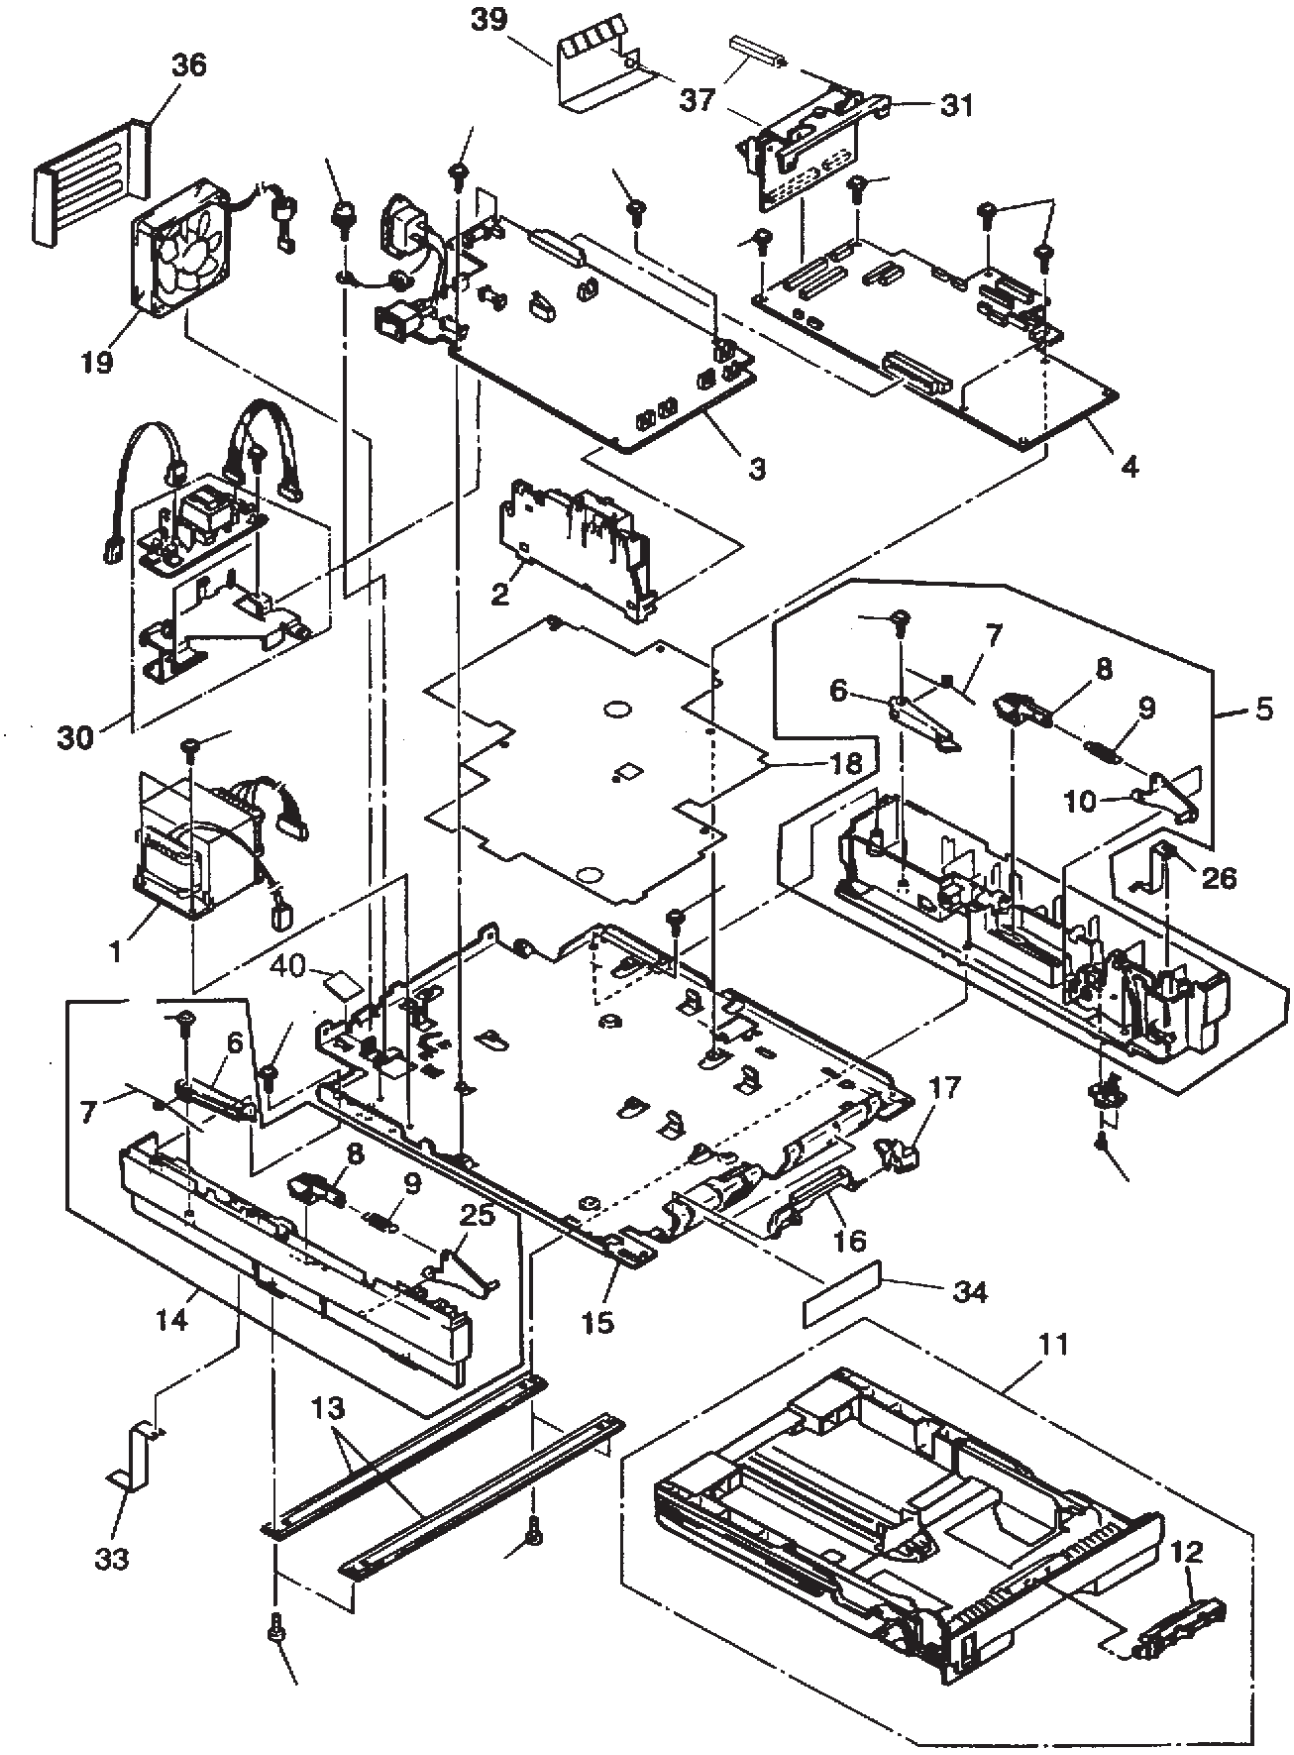

LIST 4 Base Assy

POS	BESCHREIBUNG	ARTIKELNUMMER	REMARKS
1	TRANSFORMER; 230V	4YB4049-7083P1	230 V
	TRANSFORMER; 120V	4YB4049-7082P1	120 V
2	CONTACT ASSY	3PA4083-6090G1	
3	POWER SUPPLY UNIT	40319202	230 V
	POWER SUPPLY UNIT	40035901	120 V
4	BOARD E17-8	40476108	
5	CASSETTE GUIDE ASSY; R	2YX4076-7012G1	
6	CASSETTE LOCK LEVER	3PP4083-7653P1	
7	CASSETTE LOCK SPRING	4PP4083-7655P1	
8	LINK PULL LEVER	4PP4122-1170P1	
9	SHEET SPRING	4PP4083-7666P1	
10	SHEET LINK ASSY; R	4PP4083-7658G1	
11	PAPER CASSETTE ASSY	1PA4120-1162G1	
12	SEP. FRAME ASSY	40259701	
13	BEAM PLATE	3PP4083-7660P1	
14	CASSETTE GUIDE ASSY; L	2PA4076-7011G1	
15	BASE PLATE	1PP4120-1078P1	
16	CASSETTE DETECTION LEVER	3PP4083-6154P1	
17	PAPER END SENSOR LEVER	4PP4083-7667P1	
18	INSULATOR PLATE	2PB4120-1103P1	
19	DC FAN MOTOR	4YB4120-1119P1	
25	SHEET LINK ASSY; L	4PP4083-7657G1	
26	FG PLATE C	4PP4083-7662P1	
30	SPSU PLATE ASSY	40521301	
31	PC I/F PLATE ASSY	40123401	
33	FG PLATE D	4PP4083-7665P1	
34	POLYETHYLENE TAPE	4YC4061-5115P1	
36	GUARD PLATE	40275501	
37	HEXAGON SCREW	4PB4120-1130P1	
39	EARTH PLATE	4PP4120-1187P1	
40	DAMPING RUBBER	40597801	

SECTION 5 Scan Unit

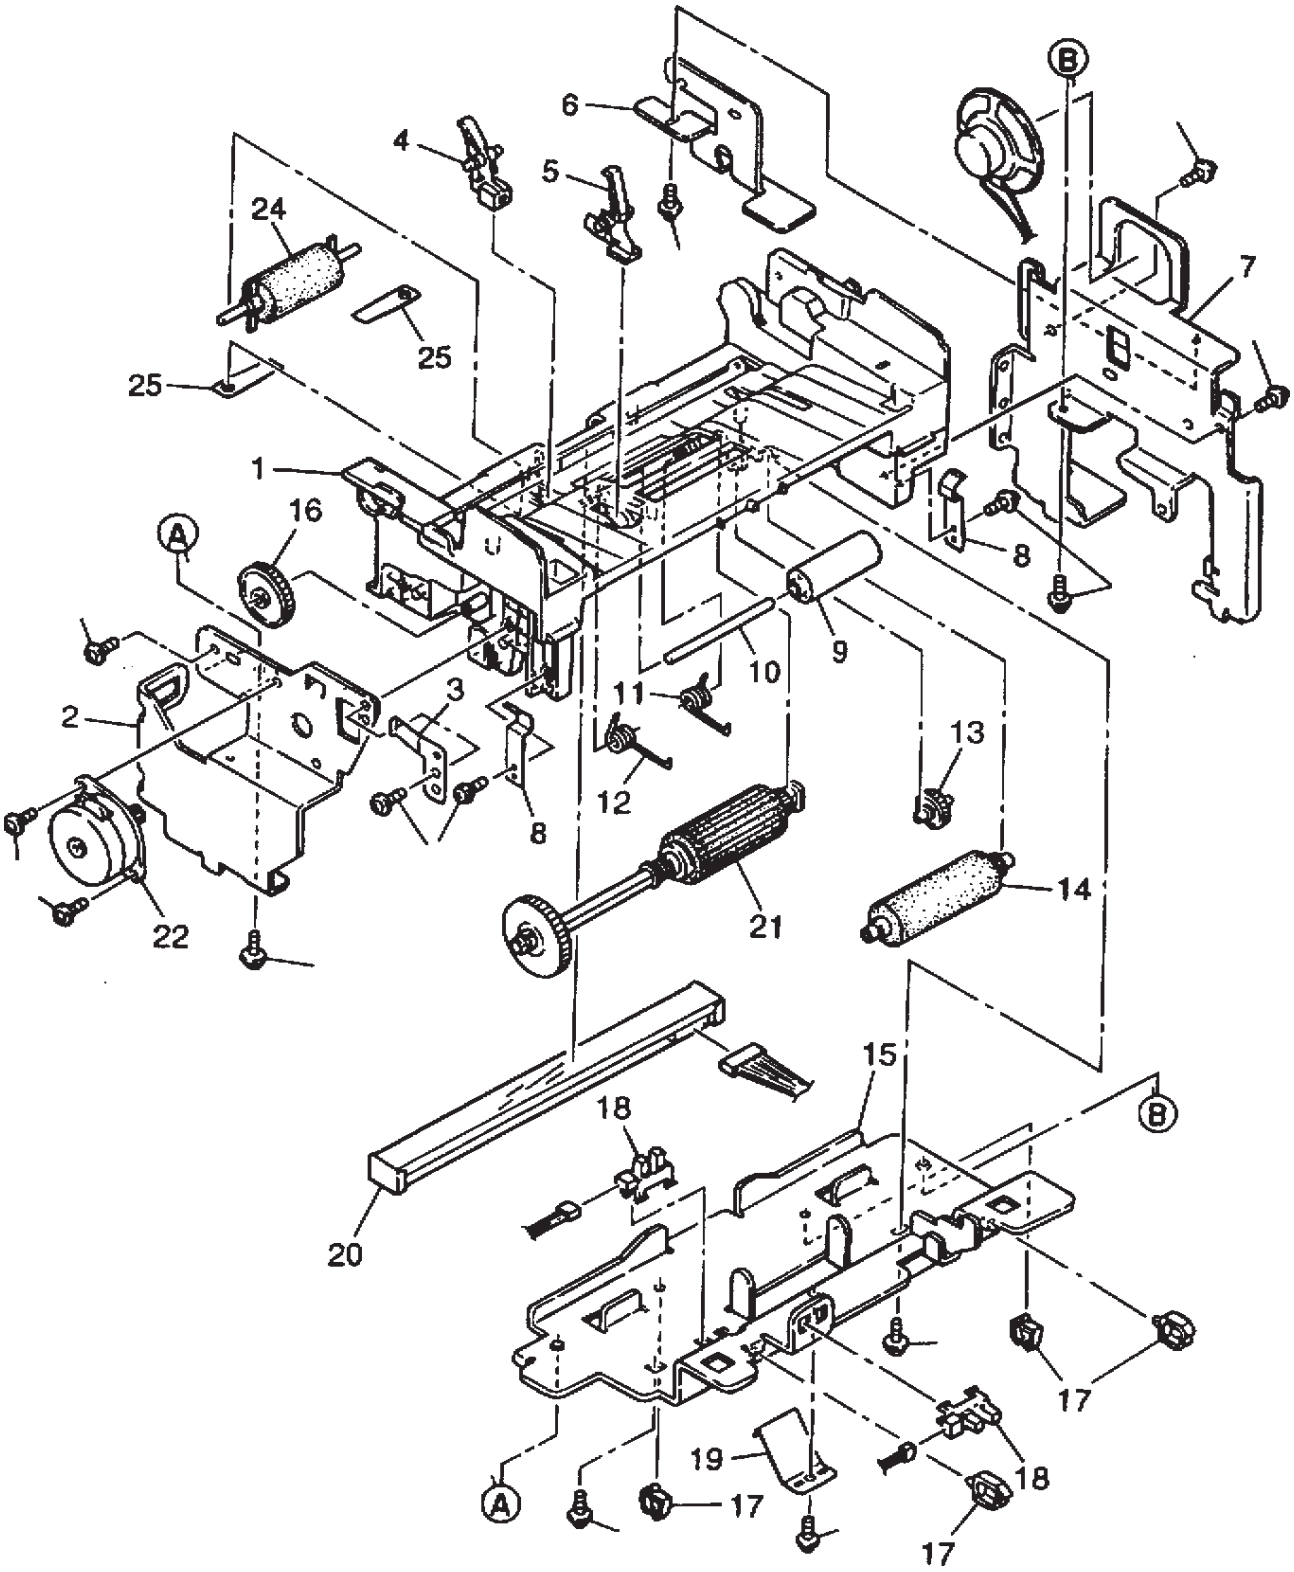

LIST 5 Scan Unit

POS	BESCHREIBUNG	ARTIKELNUMMER	REMARKS
1	SCANNER FRAME	1PP4120-1015P1	
2	SCANNER BASE FRAME (L)	2PP4120-1034P1	
3	EARTH PLATE ADF	4PP4120-1023P1	
4	PC2 LEVER	3PP4120-1017P1	
5	PC1 LEVER	3PP4120-1016P1	
6	POCKET PLATE	3PP4120-1038P1	
7	SCANNER BASE FRAME (R)	2PP4120-1037P1	
8	LATCH SPRING	4PP4120-1032P1	
9	PINCH ROLLER	4PP3529-5045P1	
10	PINCH ROLLER SHAFT	4PP4120-1020P1	
11	PINCH SPRING R	4PP4120-1022P1	
12	PINCH SPRING L	4PP4120-1021P1	
13	GEAR (Z20)	4PP3529-5033P1	
14	SUB ROLLER ASSY	4PA3529-5082G1	
15	SCANNER BOTTOM PLATE	2PP4120-1029P1	
16	GEAR (Z81/15)	4PP3529-5039P1	
17	MINI CLAMP HOLDER	4PB3527-5803P1	
18	PHOTO SENSOR	4YB4120-1137P1	
19	SENSOR SPRING	4PP4120-1030P1	
20	CONTACT IMAGE SENSOR	40141401	300 DPI
21	ADF ROLLER ASSY	3PA4120-1018G1	
22	MOTOR-S (FX-VP)	40047601	
24	EJECT PINCH ROLLER	4PB4120-1024P1	
25	EJECT PINCH SPRING	4PP4120-1025P1	

SECTION 6 Paper Guide Assy (U)

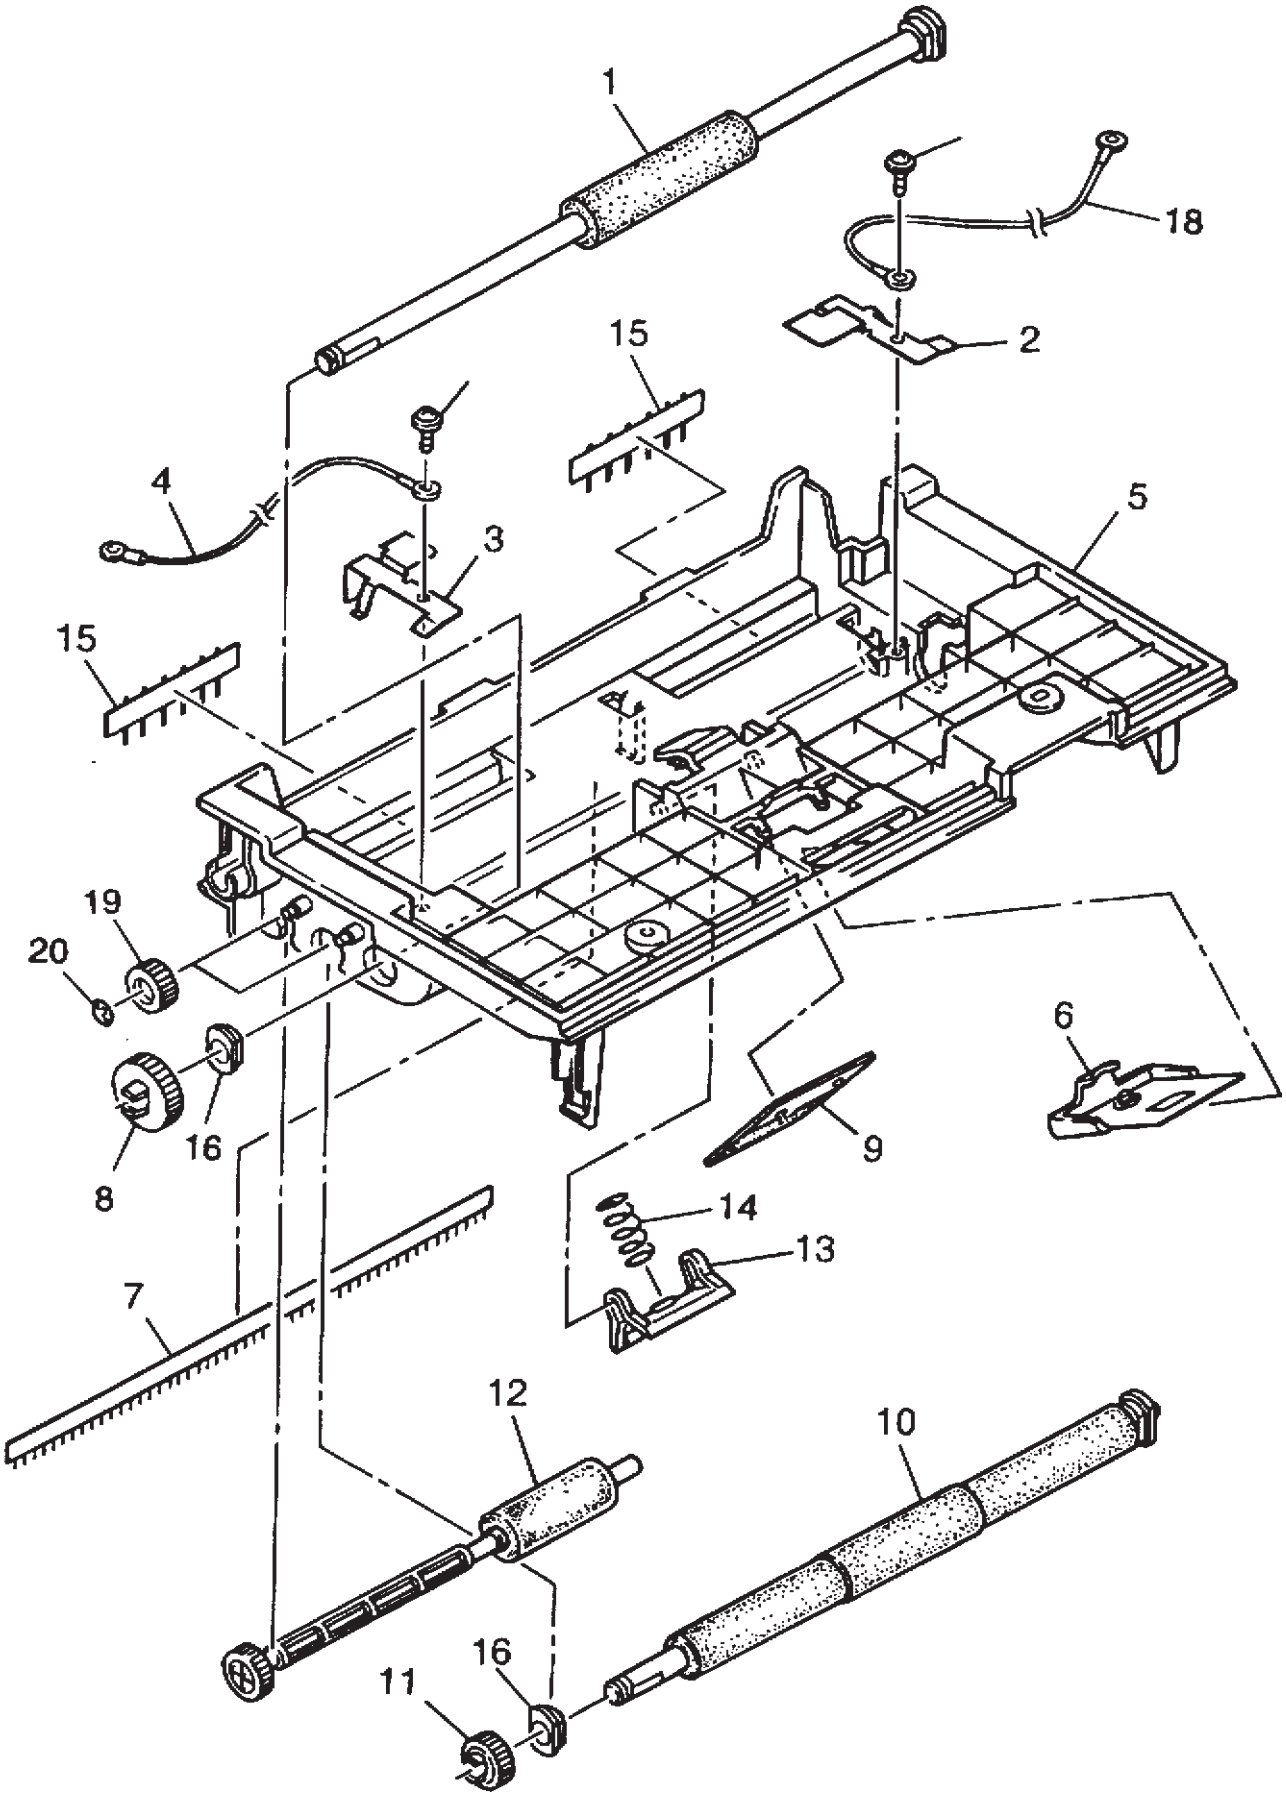

LIST 6 Paper Guide Assy (U)

POS	BESCHREIBUNG	ARTIKELNUMMER
1	FEED ROLLER ASSY	3PA4120-1045G1
2	EARTH PLATE	4PP4120-1226P1
3	EARTH PLATE (SL)	4PP4120-1227P1
4	EARTH CORD	4YS4011-1714P2
5	PAPER GUIDE	1PP4120-1040P1
6	PINCH PLATE ASSY	4PA4120-1041G1
7	DISELECTRICATION BRUSH	4PB4120-1051P1
8	GEAR (Z28)	4PP3529-5035P1
9	SEPARATION RUBBER ASSY	4PA3529-5087G1
10	SENSOR ROLLER ASSY	3PA4120-1049G1
11	GEAR (Z22)	4PP3529-5034P1
12	EXIT ROLLER ASSY	3PA4120-1052G1
13	BACK-UP PLATE	4PP3527-5153P1
14	ADF SPRING	4PP4120-1044P1
15	DISELECTRICATION BRUSH	4PB4120-1051P2
16	BEARING ADF	4PP3522-3568P1
18	EARTH CODE	4YS4011-1714P3
19	GEAR (Z16)	4PP3527-5034P1
20	CS RING	4PB4013-3501P3

SECTION 7 Cables

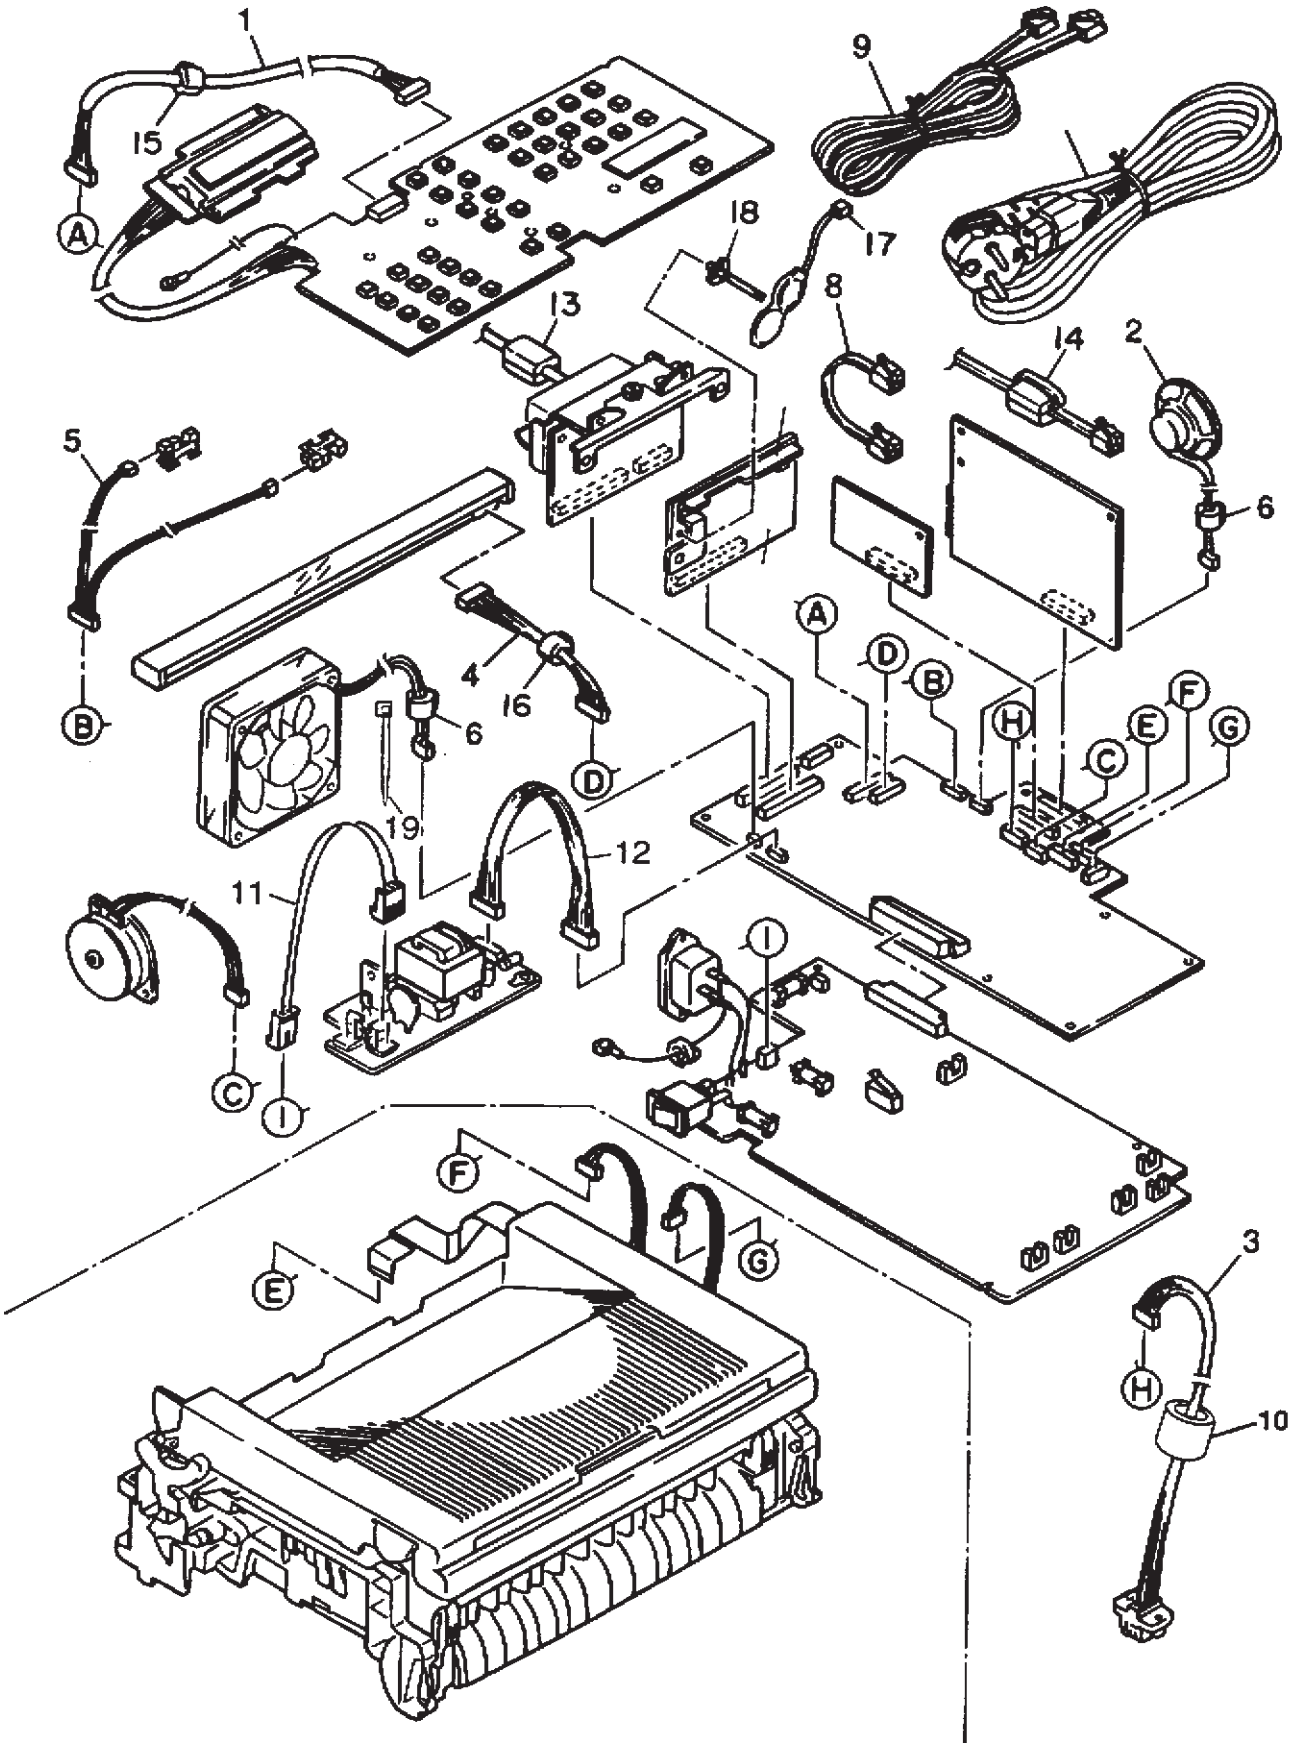

LIST 7 Cables

POS	BESCHREIBUNG	ARTIKELNUMMER
1	CONN. CORD WIRE	40040002
2	SPEAKER	4YB4120-1026P1
3	CONNECTOR CORD	3YS4111-3527P2
4	PWA CONNECTOR CORD	4YS4111-3441P1
5	PWA CONNECTOR CORD	4YS4111-3442P1
6	CORE	150A1070C0001
8	CORD	4YS4111-5581P1
9	TEL / LINE CABLE	4YB3522-1297G1
10	FERRITE CORE G	105A1051C3002
11	CONN. CORD WIRE (PSU)	40048201
12	CONN. CORD WIRE (SPSU)	40040101
13	CORE	105A1062C0002
14	CORE	105A1068C1004
15	CORE	105A1070C0004
16	FERRITE CORE E	105A1070C0003
17	SECONDARY BATTERY	4YB4120-1094P1
18	SNAP BAND	4LP-1466
19	TYING CORD	4LP-6401-B1

SECTION 8 Secand Paper Tray (1/2)

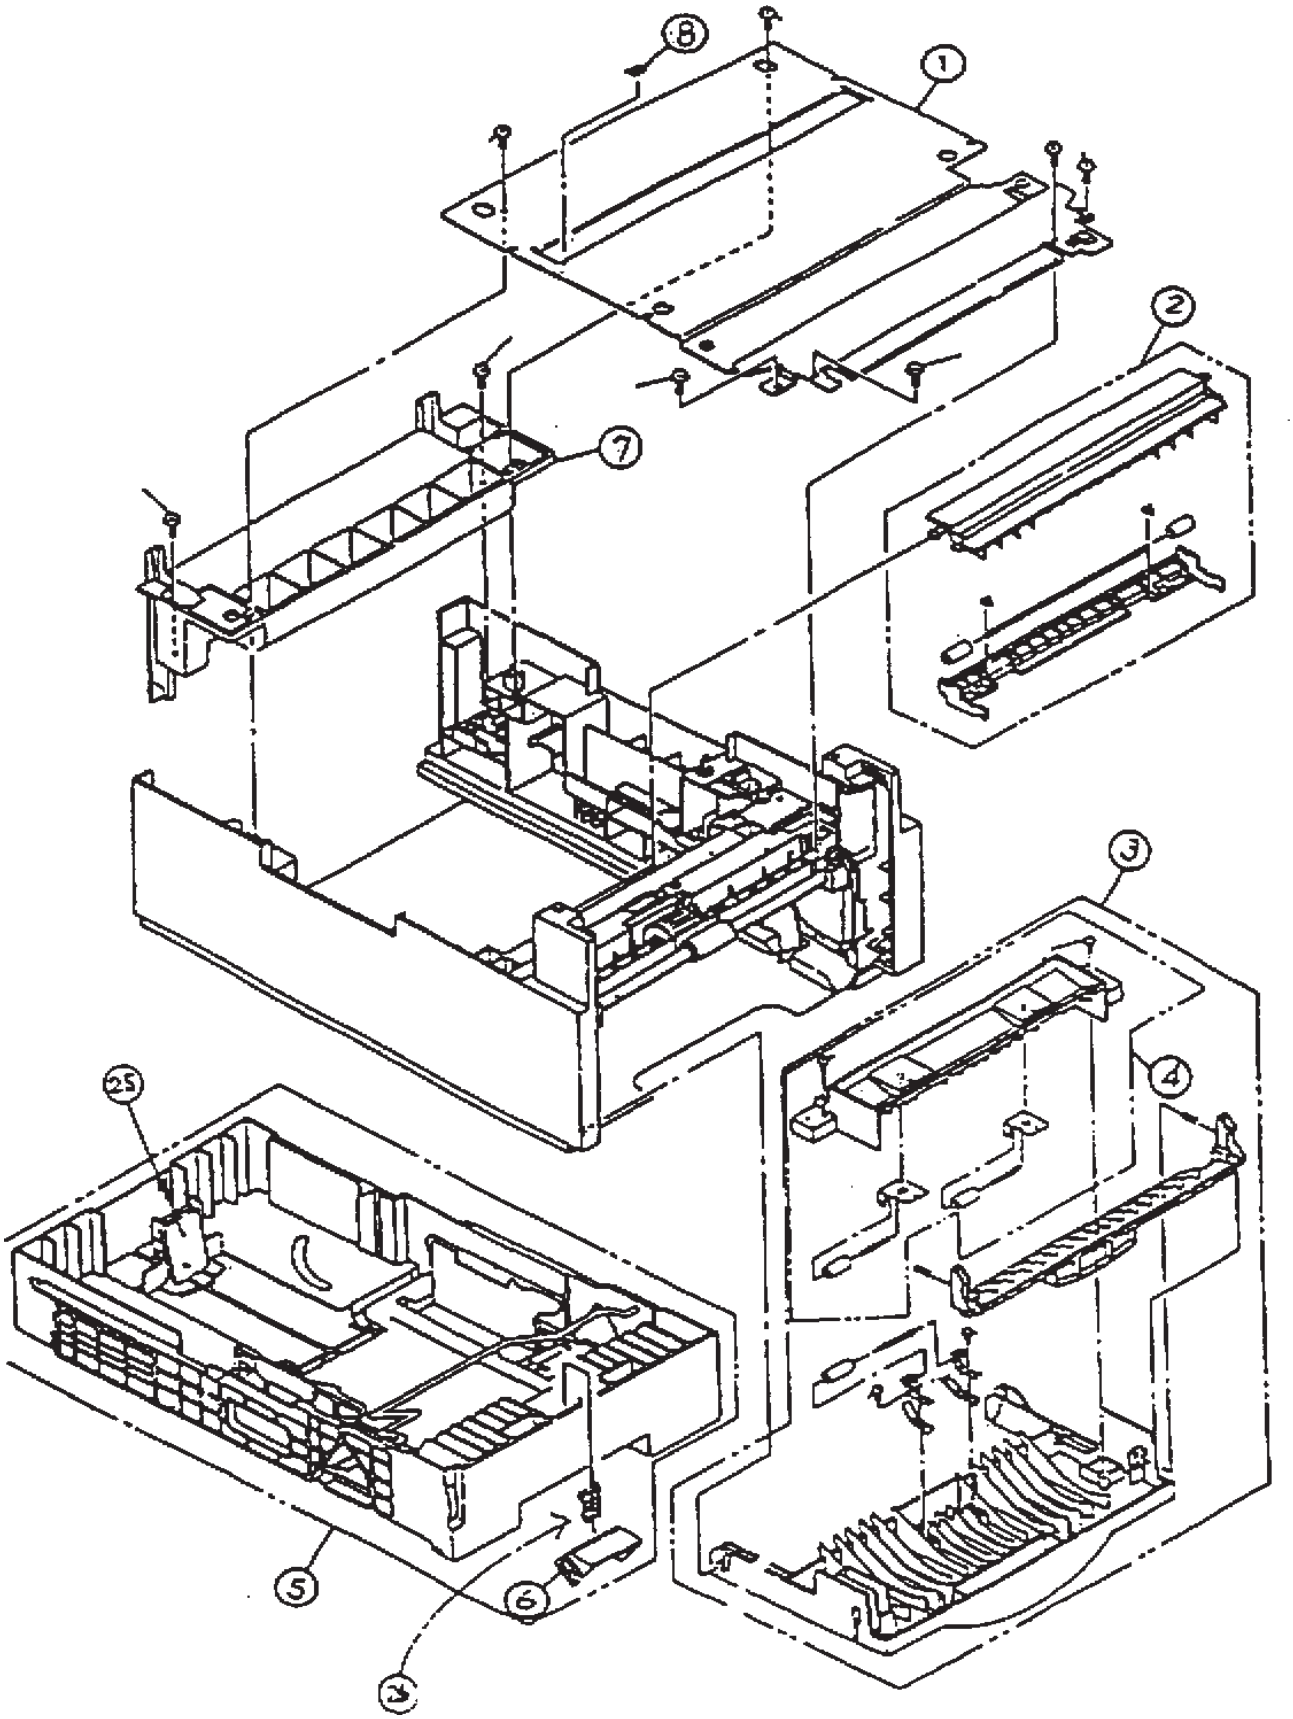

SECTION 8 Secand Paper Tray (2/2)

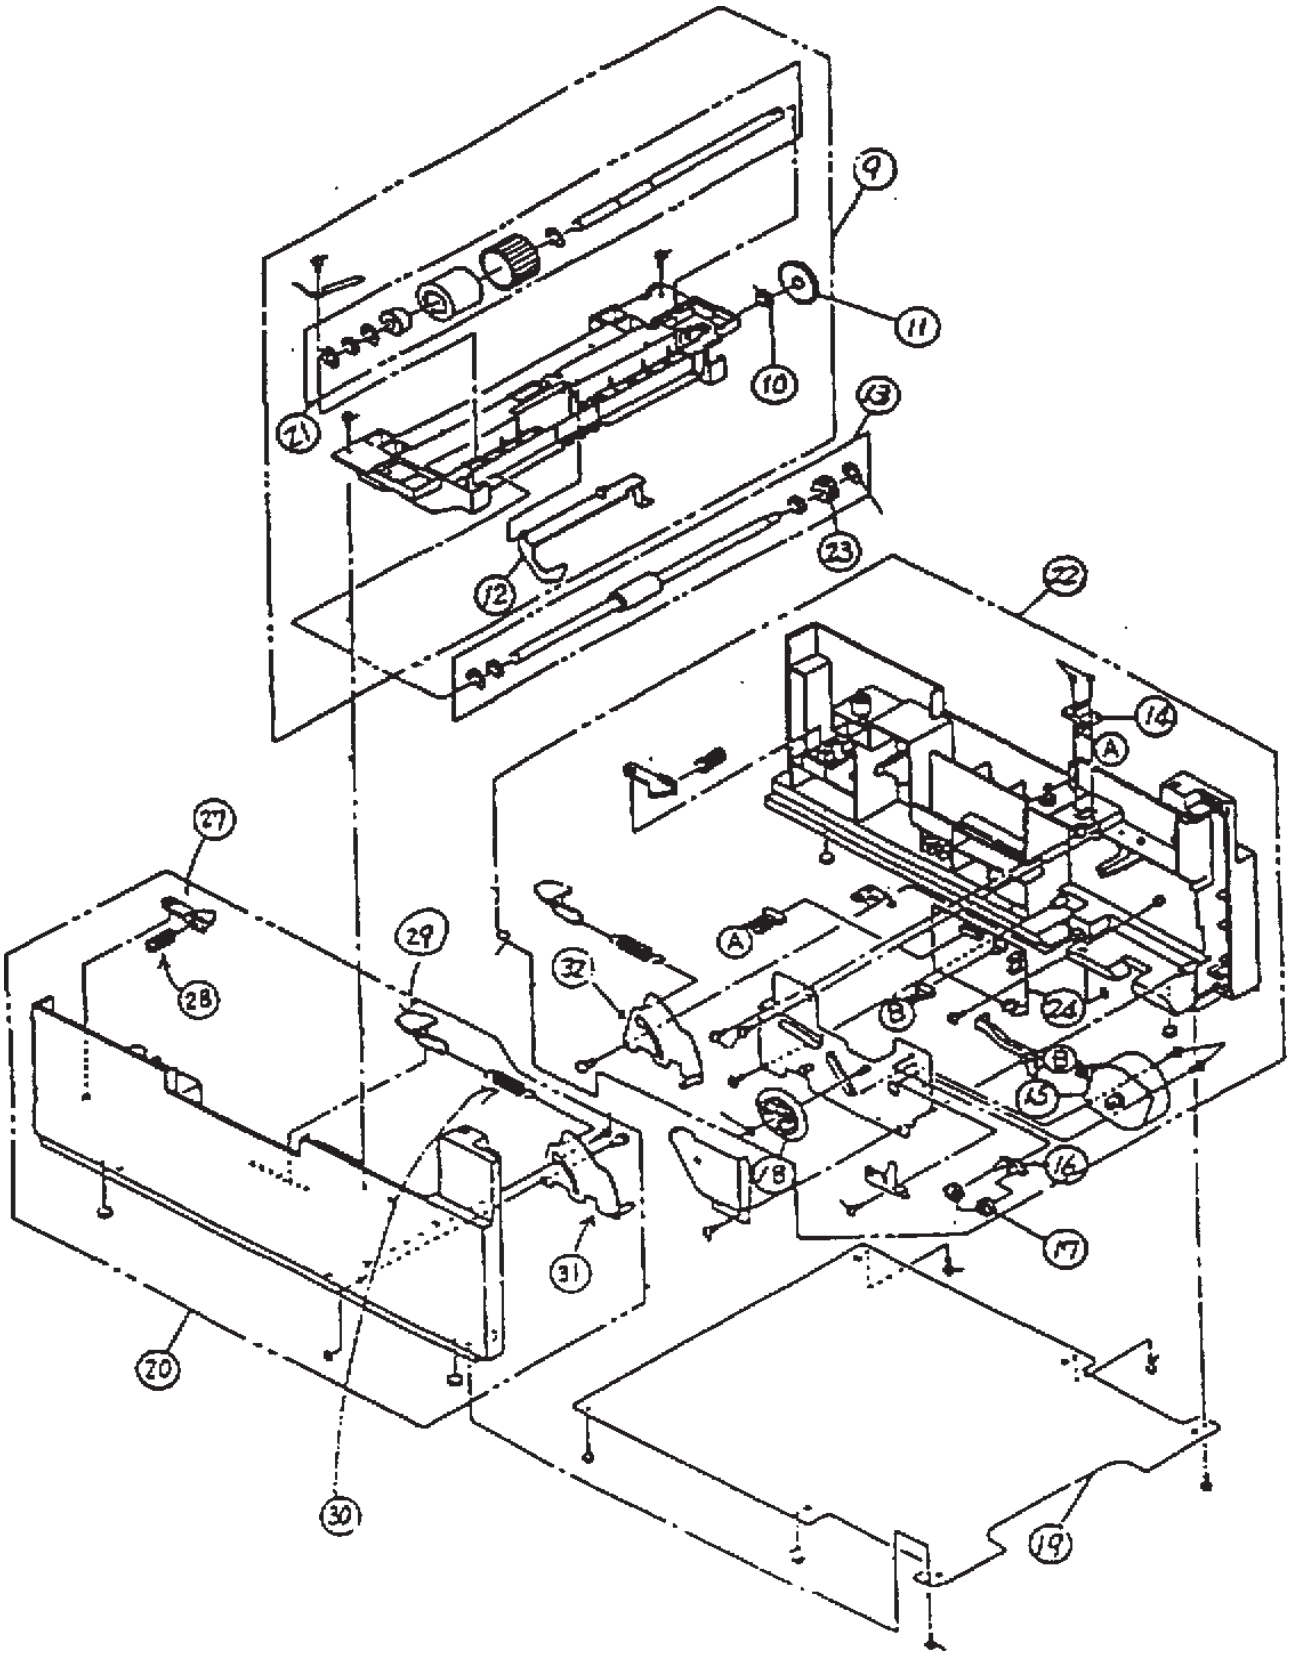

LIST 8 Secand Paper Tray

POS	BESCHREIBUNG	ARTIKELNUMMER
1	UPPER PLATE	1PP4122-1401P1
2	SHEET GUIDE ASSY	3PA4122-1370G1
3	FRONT COVER ASSY	1PA4122-1369G1
4	INNER GUIDE ASSY	1PA4122-1371G1
5	CASSETTE ASSY (2ND TRAY)	1PA4122-1362G4
6	SEP. FRAME ASSY	4PA4120-1009G1
7	REAR COVER	1PP4122-1323P1
8	STICK FINGER	4PB4122-1441P1
9	HOPPING FRAME ASSY	1PA4122-1366P1
10	METAL BUSHING	4PP3522-3568P1
11	GEAR (Z70)	4PP4122-1207P1
12	SENSOR LEVER (P)	3PP4122-1331P1
13	FEED ROLLER ASSY	3PA4122-1393G1
14	CABLE & CONNECTOR	3ys4111-3528P1
15	STEPPING MOTOR	3PB4122-1399P1
16	BRACKET	4PP4122-1384G1
17	GEAR (Z24)	4PP4122-1383P1
18	GEAR (Z87/Z60)	4PP4122-1226P1
19	BOTTOM PLATE	2PP4122-1389P1
20	SECOND CASS. GUIDE ASSY; L	1PA4122-1365G1
21	HOPPING ROLLER ASSY	3PA4122-1367G1
22	SECOND CASS. GUIDE ASSY; R	1YX4122-1364G2
23	ONE WAY CLUTCH GEAR	4PB4122-1382P1
24	TQSB-2 PCB	4YA4046-1651G2
25	TAIL GUIDE ASSY	3PA4122-1372G1
26	SEPARATION SPRING	4PP4122-1238P2
27	CASSETTE LOCK LEVER	4PP4122-1184P1
28	LOCKS SPRING	4PP4122-1347P1
29	PULL BLOCK	4PP4122-1217P1
30	SHEET SPRING	4PP4122-1398P2
31	SHEET LINK (L)	4PP4122-1339G1
32	SHEET LINK (R)	4PP4122-1336G1

SECTION 9 Option Telephone (UK, IT, NOR, DK)

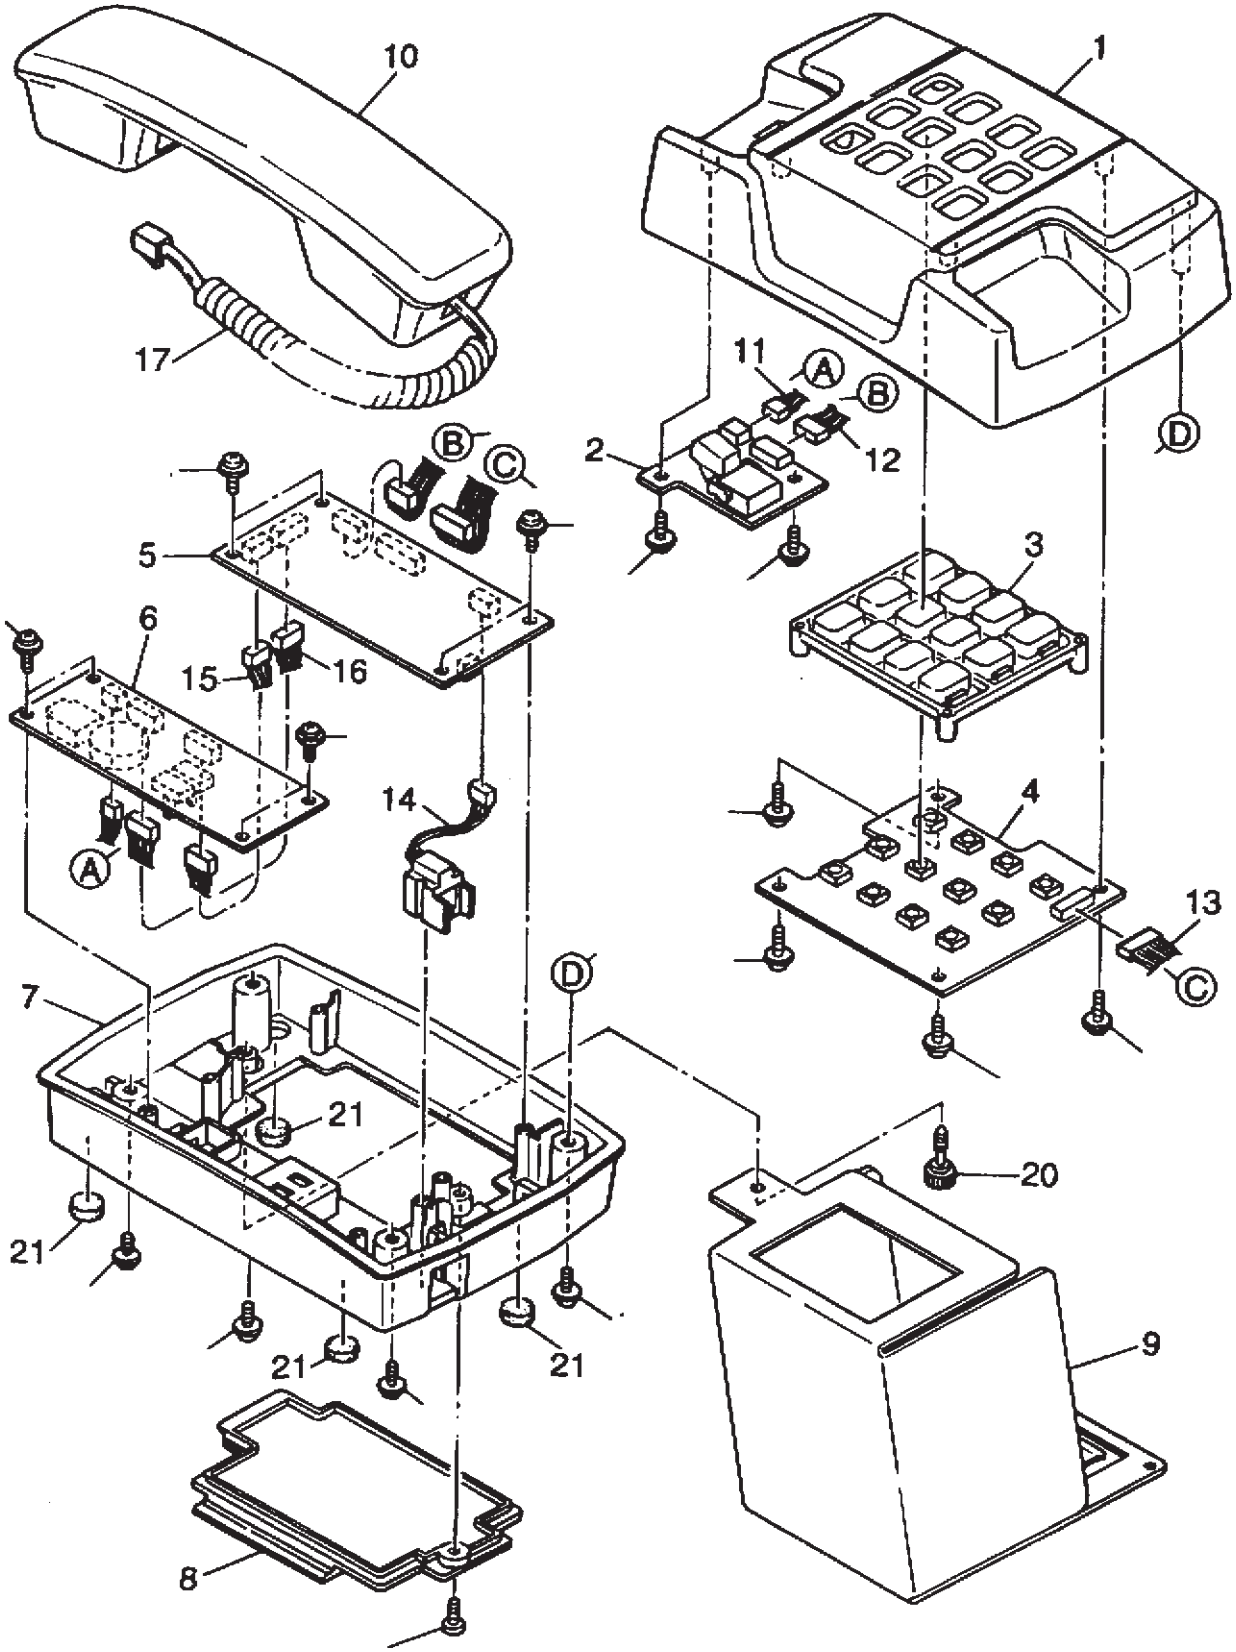

LIST 9 Option Telephone (UK, IT, NOR, DK)

POS	BESCHREIBUNG	ARTIKELNUMMER
1	CRADLE	1PP4120-1095P11
2	HOOK BOARD	4YA4129-1006G1
3	TEN-KEY	2PP4120-1068P1
4	TENKEY BOARD	4YA4129-1003G1
5	BOARD TEL W1; UK	4YU3528-1022G14
	BOARD TEL W1, NW	4YU3528-1022G15
	BOARD TEL W1, DK	4YU3528-1022G16
	BOARD TEL W!; IT	4YU3528-1022G17
6	NTIF BOARD	4YA4129-1004G1
7	CRADLE BASE	1PP4120-1096P1
8	TERMINAL COVER	3PP4120-1097P1
9	ATTACHMENT ASSY	3PA4120-1140G1
10	HANDSET	4YB3512-2029G4
11	CONN. CORD	4YS4111-5553P1
12	CONN. CORD	4YS4111-5552P1
13	CONN. CORD	4YS4111-5556P1
14	JACK CORD MODULER	4YS4111-5551P1
15	CONN. CORD	4YS4111-5554P1
16	CONN. CORD	4YS4111-5555P1
17	CORD HANDSET	4YS3522-1252G2
20	KNOB SCREW	4PB4120-1136P1
21	RUBBER FOOT	4PB4016-1960P1

SECTION 10 Option Telephone (GER, F, NL, CH, A, Int'l)

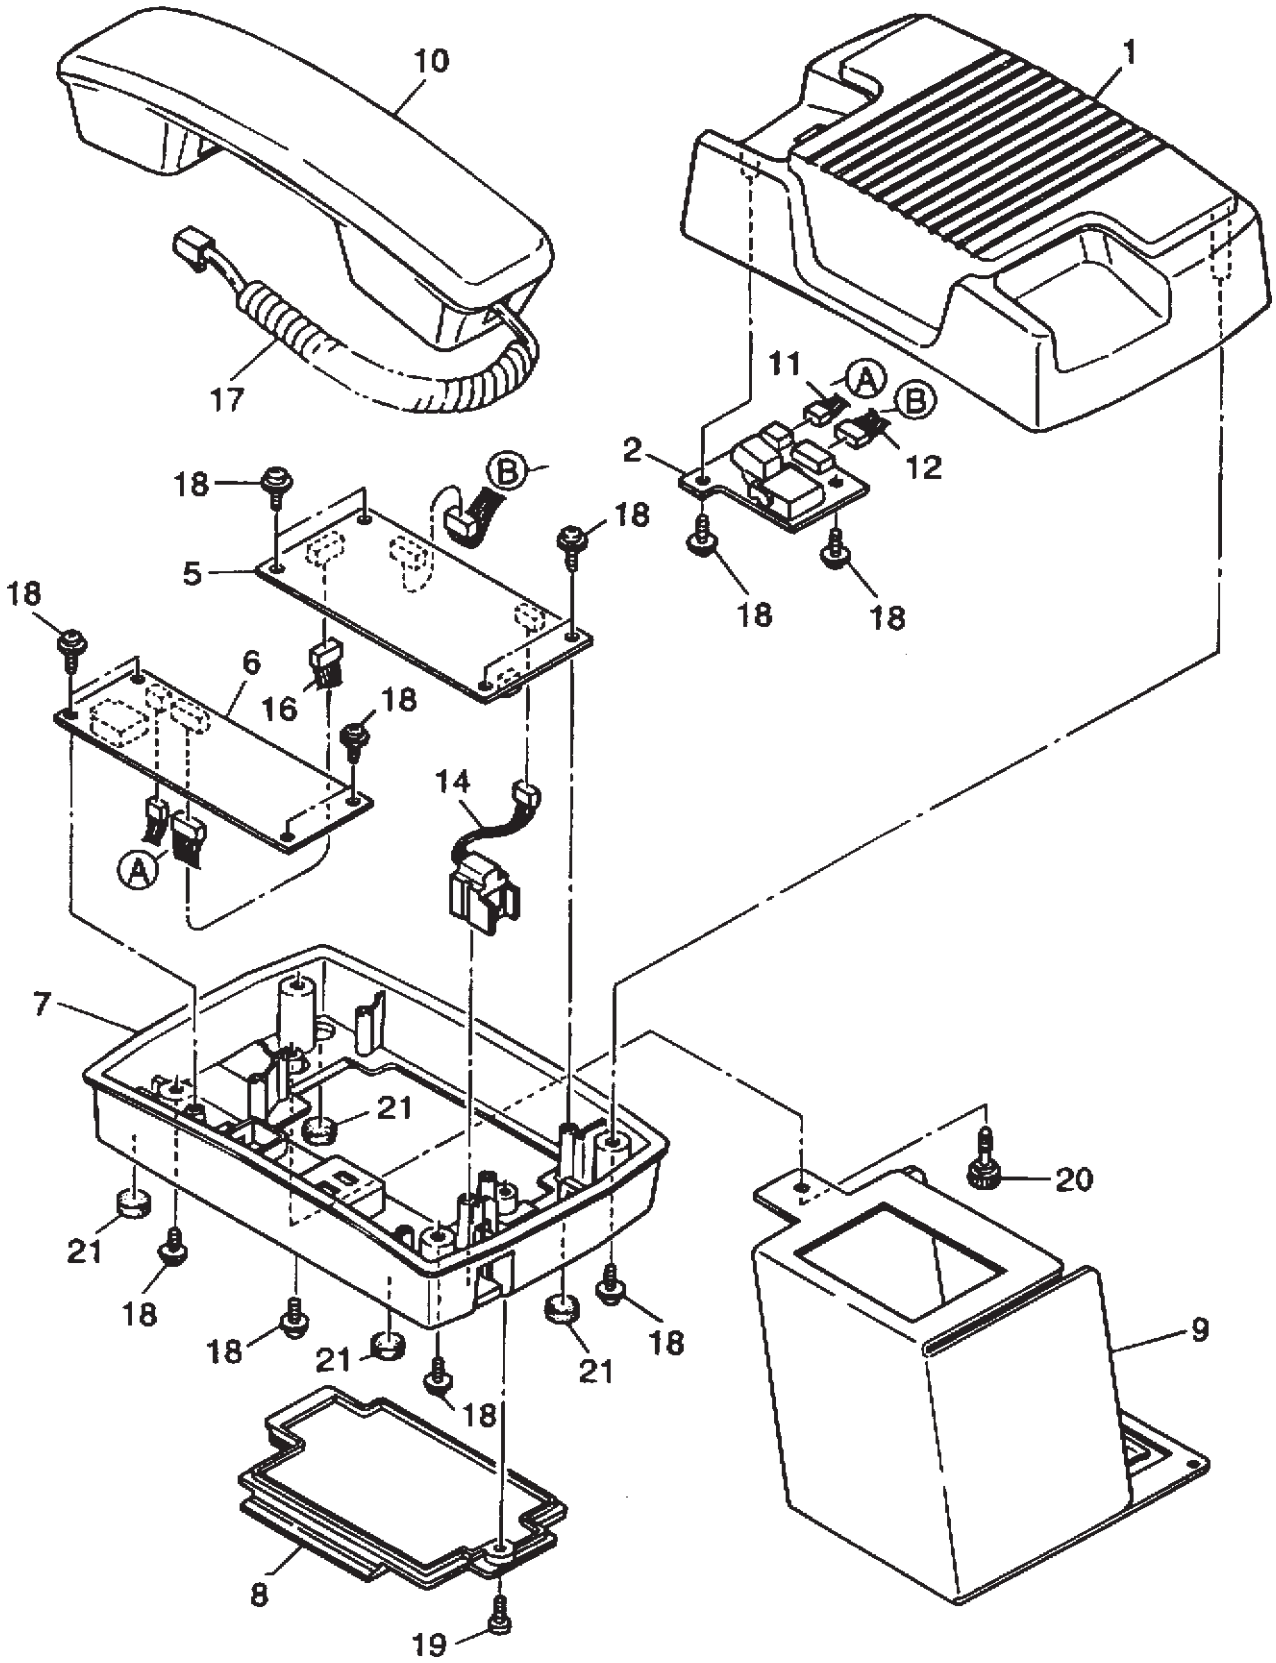

LIST 10 Option Telephone (GER, F, NL, CH, A, Int'l)

POS	BESCHREIBUNG	ARTIKELNUMMER
1	CRADLE	1PP4120-1095P11
2	HOOK BOARD	4YA4129-1006G1
5	BOARD TEL 13 (GER)	4YU3528-1038G13
	BOARD TEL 11 (SWI, AUS)	4YU3528-1037G11
	BOARD TEL 3 (HOL, OEL-INT)	4YU3528-1037G3
	BOARD TEL W2F (FRA)	4YU3528-1033G18
	BOARD TEL 7 (OKI-INT´L)	4YU3528-1037G7
6	NTIF BOARD (GER,NL,OEL-INT)	4YA4129-1004G3
	NTIF BOARD (AUS, SWI)	4YA4129-1004G2
	NTIF BOARD (FRA)	4YA4129-1004G4
7	CRADLE BASE	1PP4120-1096P1
8	TERMINAL COVER	3PP4120-1097P1
9	ATTACHMENT ASSY	3PA4120-1140G1
10	HANDSET	4YB3512-2029G4
11	CONN. CORD	4YS4111-5553P1
12	CONN. CORD	4YS4111-5552P1
14	JACK CORD MODULER	4YS4111-5551P1
16	CONN. CORD	4YS4111-5555P1
17	CORD HANDSET	4YS3522-1252G2
20	KNOB SCREW	4PB4120-1136P1
21	RUBBER FOOT	4PB4016-1960P1